



Assembly instructions

SPY

Kits SKH00-301, SKH00-302 & SKH00-303

**You've never been
so close to be a Hero ...**

1



Mount de 3 frame-spacers.

*Screws used: PT 2,9*13mm*

2



Mount de 2 landing gear holders.

*Screws used: M3*10mm + M3 locknut PT 3*10mm*

Tip : Glue de screw in place on your frame for later easy gear holder replacement...

3



Mount de 4 silent blocks.

*Screws used: M4*10mm round head*


4



Mount your motors on motor holders.

Tip : Use the screws provided with your motor and add some threadlock

5

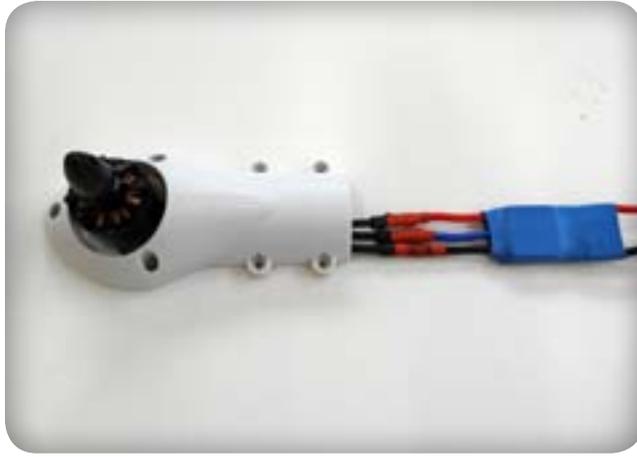

Connect your ESC to your motors.

Tip : Check your cable length depending on your frame size and flight controller.
Check your motor rotation depending on your flight controller recommendations.

6



Mount 2 motor holders on each arms.

*Screws used: M3*10mm + M3 locknuts*

Tip : Align the centering pins from your motor holders with the arms holes.

7



Insert the arms insert on each arm.

8




Mount the 3 arms on your frames.

*Screws used: M4*40mm cone head +Knuckle*

Tip : Use only the inner hole, with knuckle on top, this is just a blank mounting.


9

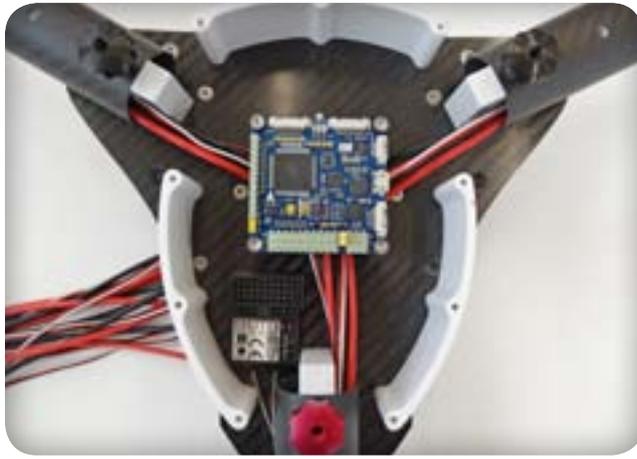

Place your flight controller and RX, route all your cables.

Tip : The center of your frame is the hole...
Use the 45 * 45 mm pattern for suitable flight controllers.


10

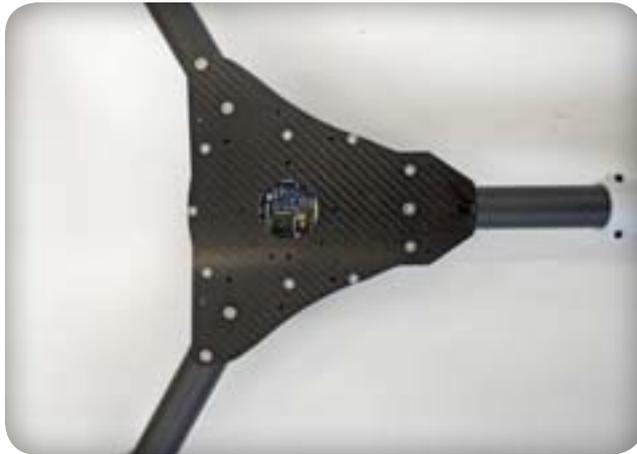

Remove the knuckles and mount the upper frame.
Use M4*40mm buttonhead in rear outer hole for fixing canopy standof.

*Screws used: PT 2,9*13mm, M4*40mm cone head + knuckle, M4*40mm buttonhead*

11

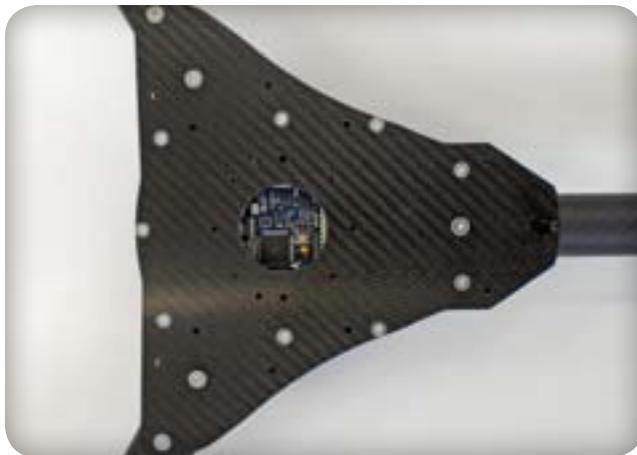

Remove the 4 first M4*40 screws, mount them in the right direction.

Screws used: M4 locknuts + M4 shims

12



Mount your inertic plate.

Screws used: M4 red knuckle

13



Mount your landing leg, landing poles and landing caps.

*Screws used: M3*16mm + M3 locknuts*

Tip : Check the for correct logo orientation

14



Screw the quick release nut on landing gear holder and slide legs into it.

Tip : Do not over tight the nut and never tight it with no leg into it

15



Drill a 8mm hole in your canopy and glue the grommet holder in place.

NB: Spyder canopy showed

Tip : Drill first a small hole, and use a reamer to get the right size, use thich CA glue

16



Mount the grommet into holder, fix the canopy with the body clip.

NB: Spyder canopy showed